



Double Sheet Testing Unit DB 12 B

Technical Description



© All rights reserved, especially the right of reproduction, distribution and translation. Copying or reproductions in any form require the written consent of the manufacturer.
Changes reflecting technical improvements may be made.

1	General information	2
1.1	Explanation of symbols	2
1.2	Declaration of conformity	2
2	Safety notices	3
2.1	Safety standards	3
2.2	Intended use	3
2.3	Areas of application	3
2.4	Organisational measures	3
3	Device overview	4
4	Specifications	6
5	Mounting the transmitter and receiver.....	7
6	Electrical connection	8
7	Commissioning	9
8	Operation - inputs and outputs.....	13
9	Diagnosis in the case of error	14

1 General information

1.1 Explanation of symbols

The symbols used in this technical description are explained below.



Attention!

This symbol appears before text passages which must absolutely be observed. Failure to heed this information can lead to injuries to personnel or damage to the equipment.



Notice!

This symbol indicates text passages containing important information.

1.2 Declaration of conformity

The DB 12 B double sheet testing unit sensor system has been developed and manufactured in adherence with the applicable European standards and directives.



Notice!

The corresponding declaration of conformity can be requested from the manufacturer.

The manufacturer of the product, Leuze electronic GmbH + Co. KG in D-73277 Owen/Teck, possesses a certified quality assurance system in accordance with ISO 9001.



2 Safety notices

2.1 Safety standards

The DB 12 B double sheet testing unit has been developed subject to the applicable safety standard IEC 947-5-2.

2.2 Intended use

The DB 12 B double sheet testing unit has been conceived as a monitoring device mainly for printing machines. It monitors incoming paper sheets at machines designed to process single sheets. It is used to detect and signal double sheets in the sheet feeder during operation.



Attention!

The DB 12 B is not a safety module acc. to EU machine guidelines.

The protection of machine and the device cannot be guaranteed if the device is operated in a manner not corresponding to its intended use.

Access to or changes on the device, except where expressly described in this manual, are not authorised.

2.3 Areas of application

Double sheets made of the following materials can be reliably detected by the DB 12 B:

- Paper
- Plastic
- Metal foils

For paper, the measurement range is 20g/m² (airmail paper) to 1200g/m² (homogeneous cardboard).

2.4 Organisational measures

All entries in this operating manual must be heeded, in particular those in the section "Safety notices" and "Commissioning".

Keep this technical description in a safe place. It should be accessible at all times.

Safety regulations

Observe the locally applicable safety regulations.

Qualified personnel

Mounting, commissioning and maintenance of the device may only be carried out by qualified personnel.

3 Device overview

The ultrasonic double sheet testing system consists of a VDB 12 B... analysis amplifier and a pair of DB 18 UP ultrasonic sensors.

It detects and checks primarily paper, plastic and metal foils which are guided in by feeders. The device functions as a presence monitor by constantly applying a signal at the **single sheet** output when an object is located between the sensors. It functions as a double sheet testing unit by comparing each sheet with the stored reference value. A detected double sheet is signalled at the **double sheet** output.

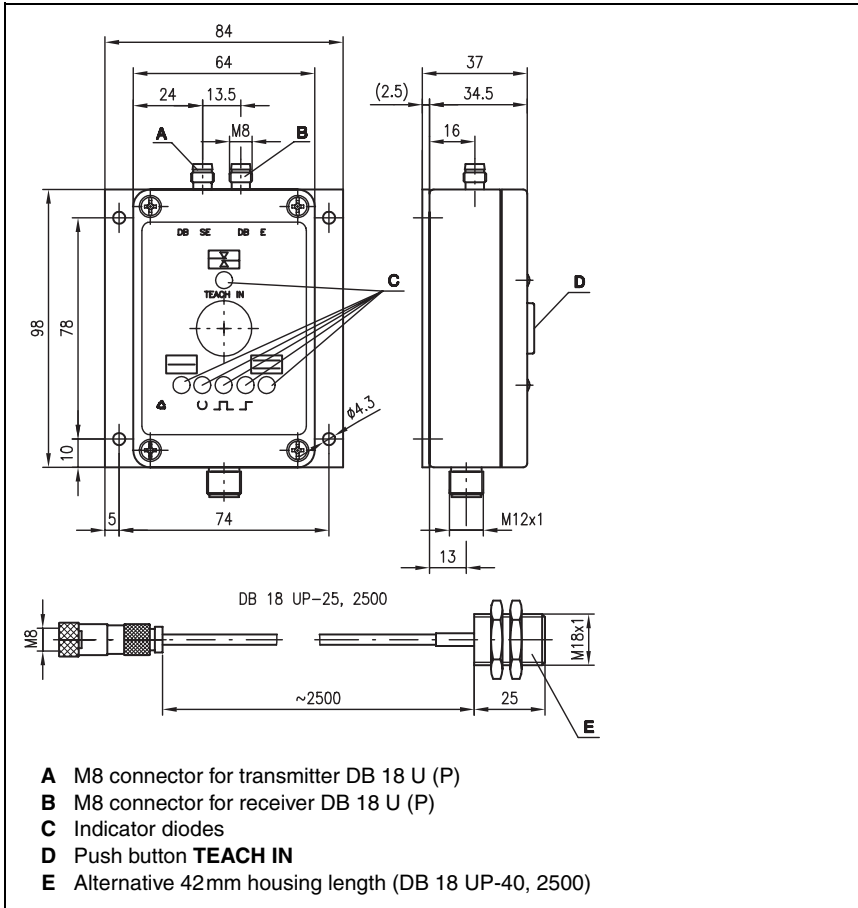


Figure 3.1: Device overview - dimensions

Controls and indicators

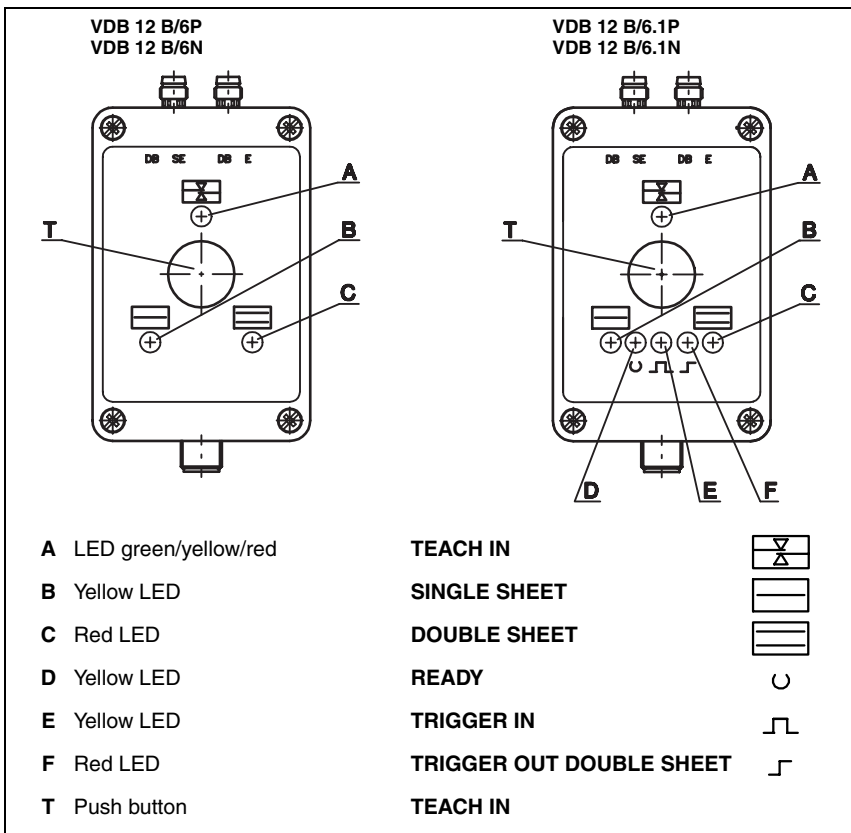


Figure 3.2: Controls and indicators

Order guide

Designation	Model	Part No.
Sensor pair M18 x 25mm	DB 18 UP-25,2500	500 33752
Sensor pair M18 x 42mm	DB 18 UP-40,2500	500 34991
Amplifier (positive logic)	VDB 12 B/6P	501 04021
Amplifier (negative logic)	VDB 12 B/6N	501 04402
Amplifier with TRIGGER input (positive logic)	VDB 12 B/6.1P	501 04038
Amplifier with TRIGGER input (negative logic)	VDB 12 B/6.1N	501 04403

Accessories

Designation	Model	Part No.
Cable 5m, PVC, 5-pin, with M12 connectors	K-D M12A-5P-5m-PVC	501 04557
Cable 5m, PUR, 8-pin, with M12 connectors	K-D M12A-8P-5m-PUR	501 04590

4 Specifications

Technical data for sensor DB 18 UP

Sensor data

Operating range	20 ... 60mm
Converter frequency	200kHz $\pm 2\%$
Ultrasonic lobe	approx. 12°

Mechanical data

Housing	nickel-faced brass
Weight	30g
Connection type	2.5m cable with M8 connector, 3-pin

Technical data for analysis amplifier VDB 12 B/...

Timing

Switching frequency	200Hz
Input pulse	min. 5ms
Delay before start-up	≤ 100 ms

Electrical data

Operating voltage U_B	18 ... 30VDC (incl. residual ripple)
Residual ripple	$\leq 15\%$ of U_B
Open-circuit current	≤ 75 mA
Switching output	2 push-pull switching outputs ¹⁾ 4 push-pull switching outputs ¹⁾
Function	single sheet detected, or ≥ 1 sheet double sheet detected, or ≥ 2 sheets double sheet triggered ²⁾ double sheet testing unit ready to operate ³⁾
Signal voltage high/low	$\geq (U_B - 2V) / \leq 2V$
Output current	max. 100mA per output
TEACH-/TRIGGER input	$R_{in} = 10$ k Ω
TEACH-/TRIGGER IN active/not active ⁴⁾	.../...P (PNP): $\geq 10V / \leq 2V$ or not connected .../...N (NPN): $\leq 2V / \geq 10V$ or not connected
TRIGGER IN pulse duration	≥ 1 ms
TEACH-/TRIGGER IN duration	max. 100ms
TEACH IN delay ⁵⁾	approx. 300ms

Indicators

all models:

LED green A	double sheet testing unit ready
LED A yellow	teach-in process
LED A red flashing	error (see chapter 9)
LED yellow B	single sheet detected
LED red C	double sheet detected
only .../6.1...:	
LED yellow D	ready for function READY
LED yellow E	inquiry signal TRIGGER IN
LED red F	double sheet triggered TRIGGER OUT

Mechanical data

Housing	aluminium, black powder-coated
Weight	400g
Connection type	M12 connector, .../6...: 5-pin .../6.1...: 8-pin

Environmental data

Ambient temp. (operation/storage)	0°C ... +50°C / -40°C ... +70°C
Protective circuit ⁶⁾	1,2,3
VDE safety class	III
Protection class	IP 65
Electromagnetic compatibility	severity level 3 acc. to IEC 801-4 and IEC 17 B (CO) 180-I and II

- 1) Function: .../...P = active high (+24V); inactive low (0V),
.../...N = active low (0V); inactive high (+24V).
The push-pull switching outputs must not be connected in parallel
- 2) Is set during low/high transition (.../...P) or high/low transition (.../...N) of the TRIGGER IN input and reset when the measurement field becomes vacant; trigger delay ≤ 1 ms, i.e., response time from edge until switching of the switching output is ≤ 1 ms
- 3) Is set when the operating voltage is applied if the receiving level is adequate as well as after the teach event if the calibration was successful.
- 4) Setting the Teach IN input disables the TEACH IN button (see page 10)
- 5) Only applies for automatic calibration during sheet movement (automatic teach)
- 6) 1=transient protection, 2=polarity reversal protection, 3=short circuit protection

5 Mounting the transmitter and receiver

The transmitter and receiver (DB 18 UP) are identical in construction and are to be mounted according to the table in figure 5.1 at an angle which varies depending on the sheet material. A larger angle of inclination increases the flutter range; e.g. with a 35° pitch, flutter is permissible within 50% of the measurement field. The distance between transmitter and receiver must be at least 20mm and can be max. 60mm.

Ensure that alignment is exact (± 1°). If the alignment does not run along the axis, the working range is reduced.



Notice!

When aligning the transmitter and receiver, take care to ensure the most exact alignment possible. See "Alignment mode" on page 9. To ensure proper function, the sensors must be inclined by the angle "B" towards the vertical.

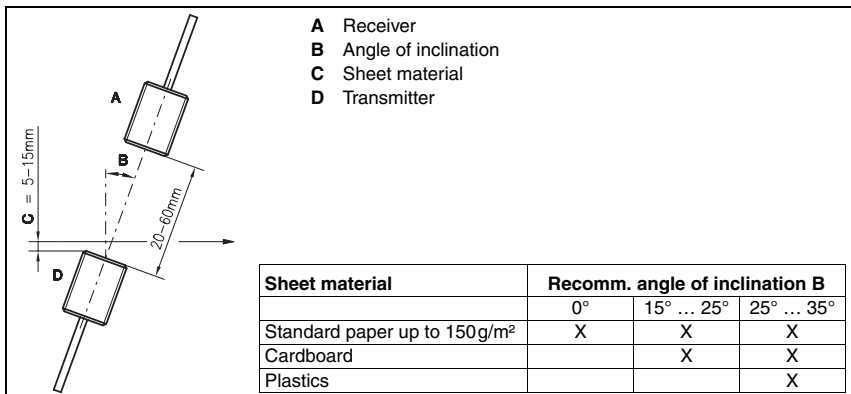


Figure 5.1: Mounting the transmitter and receiver

6 Electrical connection

Connect the transmitter and receiver at the appropriate M8 connectors of the VDB 12 B... analysis amplifier.

Connect the analysis amplifier acc. to connection diagram (figure 6.1).

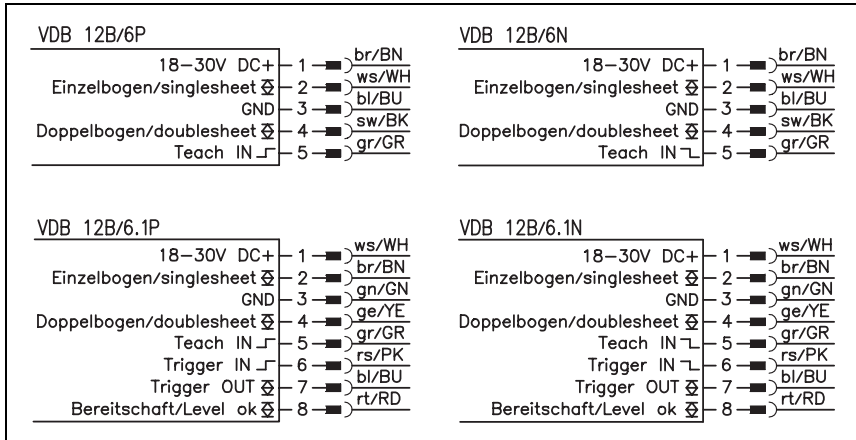


Figure 6.1: Connection diagrams VDB 12 B...

Circuit logic

VDB 12B/...P -> positive logic

VDB 12B/...N -> negative logic

7 Commissioning

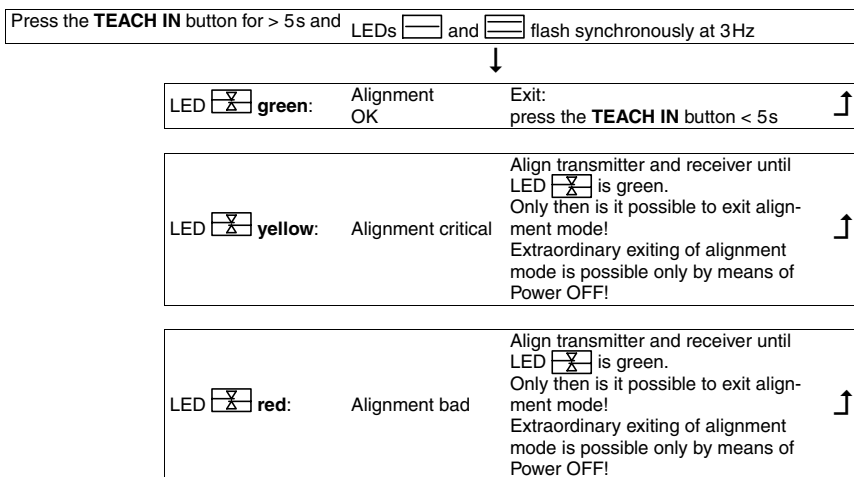


Notice!

If the indicators flash during the initial commissioning, a calibration must first be performed on a single sheet.

First apply operating voltage. An **alignment mode** is available for commissioning. This can be used to check the alignment of the transmitter and receiver.

Alignment mode



Notice!

After exiting alignment mode, it is **absolutely necessary to perform a calibration**.

Calibrating on the material to be detected

 
For reliable detection of double layers of the medium being processed, it is always necessary to perform a calibration on a single sheet of the medium.

 
 

Calibration of the material to be detected can be performed by either pressing the **TEACH IN** button on the analysis amplifier for 0.3s to 5s or by means of a control command at the **Teach IN** input (pin 5).

 

 


Notice!

Setting the **Teach IN** input (pin 5) disables the **TEACH IN** button. As soon as a signal is applied once via the **Teach IN** input for the purpose of calibration, the **TEACH IN** button remains inactive (disabled) until the next Power On.

During the calibration process, LED  illuminates yellow.

If the calibration was successful, LED  illuminates green and LEDs  and  yellow. The **single sheet** and **ready** outputs are activated. The reference value remains stored until the next calibration process.

If the calibration process was not successful, LED  flashes red and LEDs  and  illuminate red. The **double sheet** and **TRIGGER OUT** outputs (double sheet triggered) are activated.



Notice!

Causes of unsuccessful calibration include e.g.:

- More than 1 sheet between the sensors.
- Unsuitable sheet material, e.g. due to lamination or coating, too thin, too thick, or air pockets present.
- Pitch to sensors too low.

For devices VDB 12 B/6.1N and VDB 12 B/6.1P with trigger input **Trigger IN** (pin 6), it is recommended that the device be configured in such a way that, for Trigger IN, the threshold signals be adapted so that the amplifier always operates in the optimum range (1., standard mode). This mode is especially recommended when the material consistency changes during operation (moisture, density, ...).

The VDB 12 B analysis amplifier can be operated in 3 different operating modes (teach modes):

1. **Standard mode:**

Teach with intelligent transmitter/receiver control for covering a wide spectrum of materials. Automatic signal adaptation (averaging) during operation for VDB 12 B/6.1....

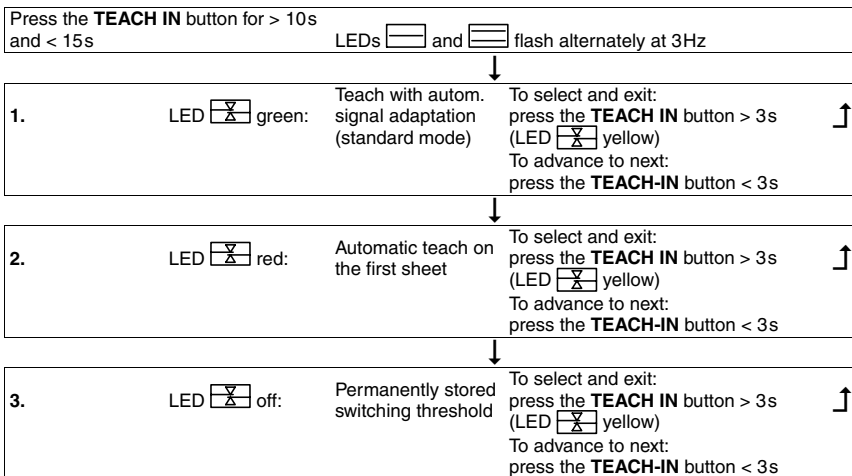
2. **Automatic teach:**

300ms after sheet detection by the ultrasonic sensors, teach-in occurs automatically. In this operating mode, manual or external teaching is not necessary. Automatic signal adaptation (averaging) possible during operation for VDB 12 B/6.1....

3. **Fixed switching threshold:**

This operating mode is recommended when the process does not permit manual or external teaching. In this operating mode, the variety of materials to be detected is limited.

Selecting the operating mode (teach mode)



Attention!

After selecting the operating mode (teach mode), a calibration must be performed!

Adapting the averaging calculation (VDB 12 B/6.1... only)

For device variants VDB 12 B/6.1... with trigger input, it is possible to adapt the signals during running control operation (operating mode **1, standard mode**).

Signal adaptation is performed by averaging measurement values which are detected at the respective **Trigger IN**. A lower value, e.g. 4, means that an average value is calculated from 4 trigger IN measurement values; a higher value, e.g. 128, means that an average value is calculated from 128 trigger-in measurement values. Signal adaptation occurs every time the set number of trigger pulses is reached.

Signal adaptation (averaging) is also possible in operating mode **2, automatic teach**.



Attention!

After changing the averaging, recalibration must be performed!

Press the **TEACH IN** button > 15s
and < 20s

LED flashes red, LED illuminates yellow.
The other LEDs display the current configured average value

Average value via	LED	LED	LED	
off = no signal adaptation	off	off	off	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
4 values (trigger pulses)	on	off	off	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
8 values (trigger pulses)	off	on	off	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
16 values (trigger pulses, default)	on	on	off	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
32 values (trigger pulses)	off	off	on	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
64 values (trigger pulses)	on	off	on	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
128 values (trigger pulses)	off	on	on	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑ To advance to next: press the TEACH-IN button < 3s.
No change back	on	on	on	To select and exit: press the TEACH IN button > 3s (LED briefly green) ↑



Attention!

After changing the averaging, recalibration must be performed!

8 Operation - inputs and outputs

The evaluation unit VDB 12 B/6P or VDB 12 B/6N continuously signals the situation occurring between the sensors to two outputs.

The **single sheet output** (pin 2) is activated as long as **one or more sheets** are located in the measurement field.

The **double sheet output** (pin 4) is activated as long as **two or more sheets** are located in the measurement field.



Notice!

For reliable operation, it is essential that calibration be performed on the material to be detected. See "Calibrating on the material to be detected" on page 10.

Also available on the VDB 12 B/6.1... evaluation units are a **Trigger IN query input**, a **Trigger OUT double sheet output** stored at the query time, as well as a **ready output**.

If a double sheet is detected on the ascending edge (VDB 12 B/6.1P) or on the falling edge (VDB 12 B/6.1N) of the query, the **Trigger OUT** output is set. This remains set until the ultrasonic path is cleared.


The **ready** output is set if the receiving level is sufficient when operating voltage is supplied. It remains set until the next calibration, provided a calibration has already been successfully completed.

The reference value remains stored even after a voltage interruption.

 
 


 
9 Diagnosis in the case of error



Attention!

In the event of an error, the **ready** output is not active and LED  is switched off!

The device LEDs indicate the following error states:

LED 	LED 	LED 	LED 	LED 	Meaning	Cause	Remedy
red flashing (6Hz)	yellow flashing (6Hz)				Double-sheet control not calibrated		Perform calibration
red flashing (6Hz)			red	red	No single sheet detected during calibration	No sheet inserted or double sheet inserted	Calibrate on single sheet
red flashing (6Hz)				red flashing (6Hz)	Amplifier detects insufficient input signal when device switched on	Sheet between the sensors or sensors not connected	Remove sheet and acknowledge with the TEACH IN button
red flashing (6Hz)				red flashing (6Hz)	Amplifier detects excessively high noise level when device switched on	Extreme background noise	Dampen background noises, e.g. using foam
	rapid yellow flashing			rapid red flashing	Current at output too high	Short circuit	Switch off voltage, check wiring
red flashing (3Hz)				red	Fatal memory error	Defect	Have repaired by Leuze electronic



Leuze electronic GmbH + Co. KG
 P.O. Box 11 11, D-73277 Owen/Teck
 Tel. +49(0)7021/ 573-0,
 Fax +49(0)7021/ 573-199
 E-mail: info@leuze.de, www.leuze.de

Sales and Service

Sales Region North
 Phone 07021/573-306
 Fax 07021/9850950

Postal code areas
 20000-38999
 40000-53999
 56000-65999
 97000-97999



Sales Region East
 Phone 035027/629-106
 Fax 035027/629-107

Postal code areas
 01000-19999
 39000-39999
 98000-99999

Sales Region South
 Phone 07021/573-307
 Fax 07021/9850911

Postal code areas
 54000-55999
 66000-96999

Worldwide

AR (Argentina)
 Nortónica S. R. L.
 Tel. Int. + 54 (0) 11/4757-3129
 Fax Int. + 54 (0) 11/4757-1088

AT (Austria)
 Ing. Franz Schmachtl KG
 Tel. Int. + 43 (0) 732/7646-0
 Fax Int. + 43 (0) 732/765036

AU + NZ (Australia + New Zealand)
 Balluff-Leuze Pty. Ltd.
 Tel. Int. + 61 (0) 3/97642366
 Fax Int. + 61 (0) 3/97533262

BE (Belgium)
 Leuze electronic nv/sa
 Tel. Int. + 32 (0) 2/2531600
 Fax Int. + 32 (0) 2/2531536

BR (Brazil)
 Leuze electronic Ltda.
 Tel. Int. + 55 (0) 11/4195-6134
 Fax Int. + 55 (0) 11/4195-6177

CH (Switzerland)
 Leuze electronic AG
 Tel. Int. + 41 (0) 1/8340204
 Fax Int. + 41 (0) 1/8332626

CL (Chile)
 Imp. Tec. Vignola S.A.I.C.
 Tel. Int. + 56 (0) 32/351111
 Fax Int. + 56 (0) 32/351128

CN (China)
 Leuze electronic GmbH + Co. KG
 Shanghai Representative Office
 Tel. Int. + 86(0)21/68880920
 Fax Int. + 86(0)21/68880919

CO (Colombia)
 Componentes Electronicas Ltda.
 Tel. Int. + 57 (0) 4/3511049
 Fax Int. + 57 (0) 4/3511019

CZ (Czech Republic)
 Schmachtl CZ s.r.o.
 Tel. Int. + 420 (0) 2/44001500
 Fax Int. + 420 (0) 2/44910700

DK (Denmark)
 Desim Elektronik APS
 Tel. Int. + 45/70220066
 Fax Int. + 45/70222220

ES (Spain)
 Leuze electronic S.A.
 Tel. Int. + 34 93/4097900
 Fax Int. + 34 93/4905820

FI (Finland)
 SKS-automaatio Oy
 Tel. Int. + 358 (0) 9/852661
 Fax Int. + 358 (0) 9/8526820

FR (France)
 Leuze electronic sarl.
 Tel. Int. + 33 (0) 1/60051220
 Fax Int. + 33 (0) 1/60050365

GB (United Kingdom)
 Leuze Mayer electronic Ltd.
 Tel. Int. + 44 (0) 1480/408500
 Fax Int. + 44 (0) 1480/403808

GR (Greece)
 UTECO A.B.E.E.
 Tel. Int. + 30 (0) 210/4210050
 Fax Int. + 30 (0) 210/4212033

HK (Hong Kong)
 SensorTech Company
 Tel. Int. + 852/26510188
 Fax Int. + 852/26510388

HU (Hungary)
 Kvalix Automatika Kft.
 Tel. Int. + 36 (0) 1/2722242
 Fax Int. + 36 (0) 1/2722244

IL (Israel)
 Galoz electronics Ltd.
 Tel. Int. + 972 (0) 3/9023456
 Fax Int. + 972 (0) 3/9021990

IN (India)
 Global Tech (India) Pvt. Ltd.
 Tel. Int. + 91 (0) 20/24470085
 Fax Int. + 91 (0) 20/24470086

IR (Iran)
 Tavan Ressan Co. Ltd.
 Tel. Int. + 98 (0) 21/2606766
 Fax Int. + 98 (0) 21/2002883

IT (Italy)
 Leuze electronic S.r.l.
 Tel. Int. + 39 02/26110643
 Fax Int. + 39 02/26110640

JP (Japan)
 C. Illies & Co. Ltd.
 Tel. Int. + 81 (0) 3/34434111
 Fax Int. + 81 (0) 3/34434118

KR (South Korea)
 Leuze electronic Co., Ltd.
 Tel. Int. + 82 (0) 31/3828228
 Fax Int. + 82 (0) 31/3828522

MX (Mexico)
 Leuze Lumiflex México, S.A. de C.V.
 Tel. Int. + 52 (0) 81/83718616
 Fax Int. + 52 (0) 81/83718588

MY (Malaysia)
 Ingermark (M) SDN.BHD
 Tel. Int. + 60 (0) 3/60342788
 Fax Int. + 60 (0) 3/60342188

NL (Netherlands)
 Leuze electronic B.V.
 Tel. Int. + 31 (0) 418/653544
 Fax Int. + 31 (0) 418/653808

NO (Norway)
 Elteco AS
 Tel. Int. + 47 (0) 35/562070
 Fax Int. + 47 (0) 35/562099

PL (Poland)
 Balluff Sp. z o.o.
 Tel. Int. + 48 (0) 22/8331564
 Fax Int. + 48 (0) 22/8330969

PT (Portugal)
 LA2P, Lda.
 Tel. Int. + 351 (0) 21/4447070
 Fax Int. + 351 (0) 21/4447075

RO (Romania)
 O'Boyle s.r.l.
 Tel. Int. + 40 (0) 56/201346
 Fax Int. + 40 (0) 56/221036

RU (Russian Federation)
 All Impex
 Tel. + Fax + 7 095/ 9332097

SE (Sweden)
 Leuze SensorGruppen AB
 Tel. + 46 (0) 8/7315190
 Fax + 46 (0) 8/7315105

SG + PH + ID (Singapore + Philippines + Indonesia)
 Balluff Asia Pte. Ltd.
 Tel. Int. + 65/62524384
 Fax Int. + 65/62529060

SI (Slovenia)
 Tiptish d.o.o.
 Tel. Int. + 386 (0) 1/2005150
 Fax Int. + 386 (0) 1/2005151

SK (Slovakia)
 Schmachtl SK s.r.o.
 Tel. Int. + 421 (0) 2/58275600
 Fax Int. + 421 (0) 2/58275601

TH (Thailand)
 Industrial Electrical Co. Ltd.
 Tel. Int. + 66 (0) 2/642-6700
 Fax Int. + 66 (0) 2/642-4249

TR (Turkey)
 Balluff Sensör Ltd. Sti.
 Tel. Int. + 90 (0) 212/3200411
 Fax Int. + 90 (0) 212/3200416

TW (Taiwan)
 Great Cofue Technology Co., Ltd.
 Tel. Int. + 886 (0) 2/29838077
 Fax Int. + 886 (0) 2/29853373

UA (Ukraine)
 Beverly-Foods Ltd.
 Tel. Int. + 38 044/5255927
 Fax Int. + 38 044/5257807

US + CA (United States + Canada)
 Leuze Lumiflex Inc.
 Tel. Int. + 1 (0) 248/4864466
 Fax Int. + 1 (0) 248/4866699

ZA (South Africa)
 Countpulse Controls (PTY.) Ltd.
 Tel. Int. + 27 (0) 11/6157556
 Fax Int. + 27 (0) 11/6157513