
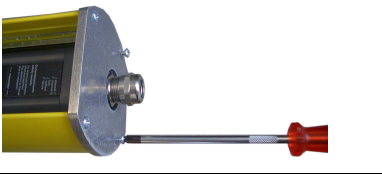
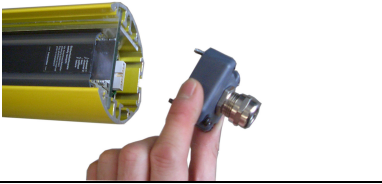
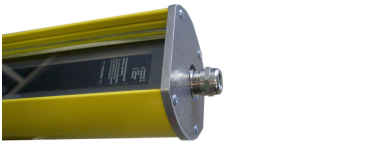




Brief instructions to supplement the COMPACT and COMPACT EX2 operating instructions with the use of device columns with DCW-1600G glass insert:

 This work must only be carried out in clean environment free of explosives.

Mounting and installation notes	
	The bottom aluminum cover of the column must be removed to connect the device.
	The device's end cap has to be removed. Pull it in straight direction.
	Pass the cable through the aluminum cover and the cable screw of the end cap and connect it to the device. Use suitable wire-end sleeves.
	Put the end cap on again in straight direction and fix it.
	Replace the aluminum cover onto the column.

The column can be mounted at any height on the rear panel using the sliding nuts. At least 6 sliding nuts must be used for this in order to guarantee the column is securely fixed.